

Instruction manual





English

1. Button: On/Off Playback Music/Radio
2. Button: Previous / Reduce volume
3. Button: Next / Increase volume
4. Button: Press to turn on/off the torch, hold to activate the flasher
5. Torch
6. Speaker
7. Slot for micro SD card
8. USB connector

Features:

- 1- Battery Capacity Optional
- 2- Torch and flashlight torch
- 3- Radio FM
- 4- Music player with micro SD card
- 5- MP3 Speaker
- 6- Wireless connection

Note: The torch can be removed to access the USB connector and the micro SD card slot. The loudspeaker can not be removed.

Buttons	Operation	Mp3/WAV/ wireless connection	FM Radio
	Short press	Play	Double click to receive the frequency
	Long press	On/Off	On/Off
	Short press	Previous	Next program
	Long press	Reduce volume	Reduce volume
	Short press	Next	Previous program
	Long press	Increase volume	Increase volume
	Short press	Torch On/Off	
	Long press	Flashlight	

How to charge your smartphone or device

Connect the USB cable to the USB connector of the power bank. You must use a cable compatible with your mobile device. While charging a LED light will turn on. Once the charging is complete, the light will turn off. If the power bank does not have enough power the LED light will flash until it turns off.

How to charge the power bank

Connect the "USB to USB" cable to the USB connector of the power bank. Connect the other end of the cable to a USB port of a PC/laptop or to an AC / USB adapter. While charging a LED light will flash. Once the charging is complete, the light will turn off.

Proper use

To maintain maximum efficiency of your power bank, follow these instructions:

1. Charge once every 3 months if you do not use the device
2. Store in a dry place away from sources of humidity or corrosive elements
3. Do not clean with abrasive, soap or detergents

WARNINGS

Read the instructions carefully before using the device. Failure to read and follow the instructions can result in fire, explosion, electrical shock or other serious injury or death.

1. Do not modify, disassemble, open, throw, crush or cut the device
2. This device must not be exposed to fire, rain or high voltage
3. This device is not a toy. Keep away from children

Made in China