

Open the following consoles:

SYMBOLS																							
BRAND	MODEL	PH000	PH00	PH0	PH1	SL2.0	SL3.0	SL4.0	T4	T5H	T6H	T8H	T10H	T15H	T20H	HEX1.3	TS3.8	TS4.5	TA2.0	TA2.3	TRI1.5	TRI2.0	TRI3.0
Microsoft	XBox [®]			•									•	•	•								
	Xbox 360 [®]			•	•		•		•			•	•	•		•							
Nintendo	Wii [®]	•		•	•																•	•	•
	Gamecube [®]			•													•	•			•	•	•
	GBA [®] , DS [®] , DS lite [®]			•																	•	•	•
	NES [®]			•													•				•	•	•
	SNES [®]			•													•	•			•	•	•
	N64 [®]			•													•	•			•	•	•
Sony	PS [®] , PS2 [®]			•	•																•	•	•
	PS3 [®]	•		•	•								•								•	•	•
	PSP [®]	•		•														•					
Sega	Saturn [®]			•	•													•					
	Game Gear [®]			•													•	•					
	Dreamcast [®]			•													•	•					
	Genesis [®]			•														•					
Toys, model		•	•	•	•	•	•	•	•	•	•	•	•	•	•				•	•			
Case controller or other accessories of video game		•	•	•	•	•	•	•	•	•	•	•	•	•	•						•	•	•

